


Hunter

Pro-HC Irrigation Controller

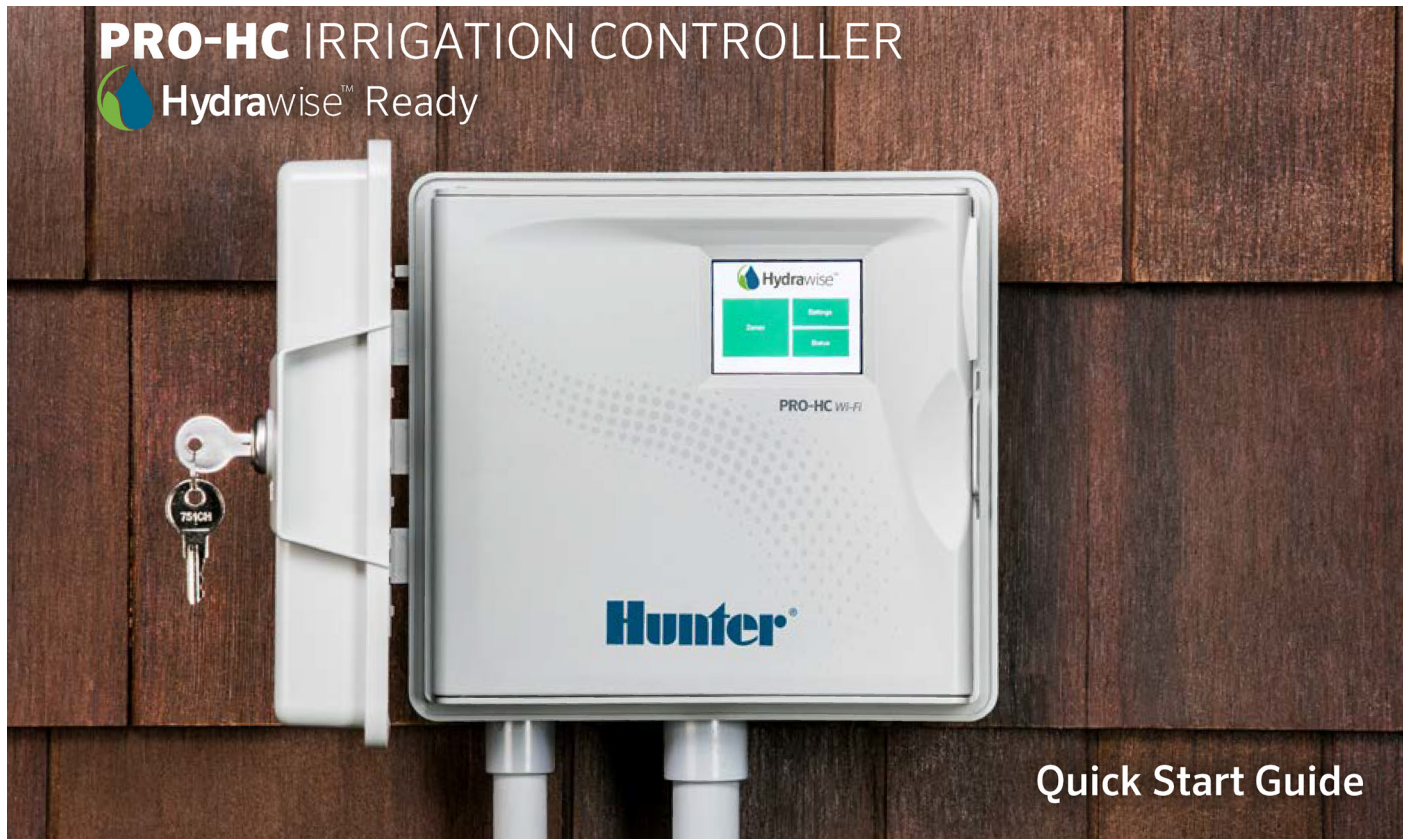

PRO-HC SUPPORT

Thank you for purchasing the Hunter Pro-HC Controller. This Quick Start Guide will help you install and configure the Pro-HC Controller and connect to Wi-Fi. For support of the Hydrawise™ cloud software or help with your Hydrawise account, please visit hunter.direct/prohchelp.

Your Pro-HC box contains:

- A Pro-HC Wi-Fi controller
- 24 VAC transformer (indoor model) or built-in transformer (outdoor model)
- Three screws and three wall anchors for wall mounting
- Three wire nuts for U.S. outdoor and one Terminal block for European outdoor models

Hunter

Pro-HC Irrigation Controller


INSTALLATION

Installing the Pro-HC Controller

Start by choosing a location with good Wi-Fi coverage. Wi-Fi coverage can be easily tested using a smartphone. A signal strength of two or three bars is recommended. Wi-Fi connectivity can also be tested on the Pro-HC itself (signal strength is shown when you select a wireless network).

Mounting the controller to a wall

All necessary hardware is included for most installations.

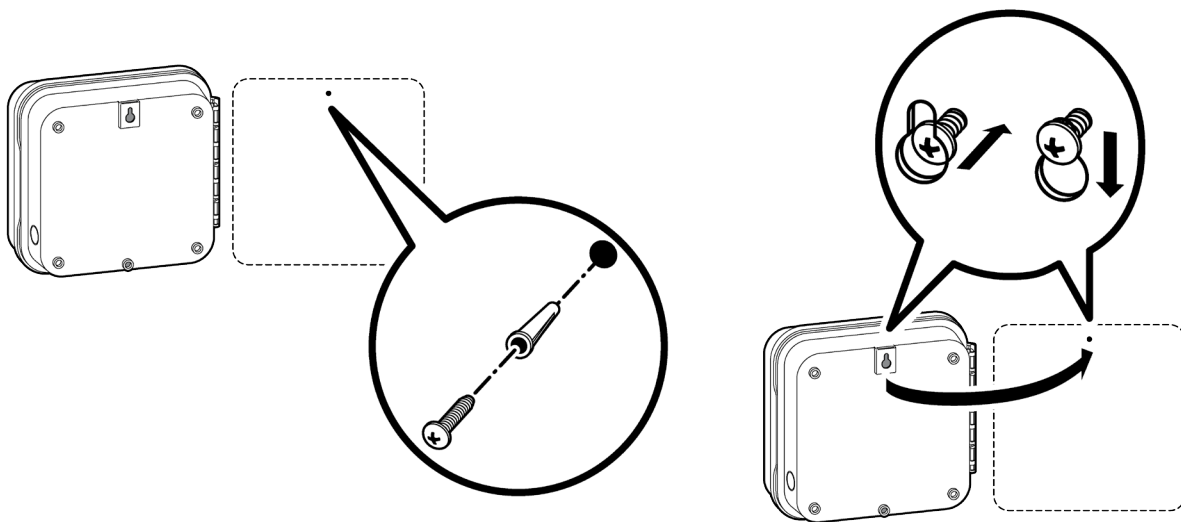

Mounting the controller to a wall *(continued)*

1. Use the hole at the top of the controller as a reference and secure a 1" (25 mm) screw into the wall. **Note:** Install screw anchors when attaching the controller to drywall or masonry wall.
2. Align controller with the screw and slide the keyhole on top of the controller over the screw.
3. Secure controller in place by installing screws in the other mounting holes.

For PHC-601-A, PHC1201-A, and PHC2401-A: If the supply cord is damaged, it must be replaced by the manufacturer or service agent or a similarly qualified person to avoid hazard.


Hunter

Pro-HC Irrigation Controller

CONNECTING AC POWER

Indoor cabinet

Route transformer cable through the hole on the bottom left side of the controller and connect one yellow wire to each of the screws marked 24AC and the green wire to GND.

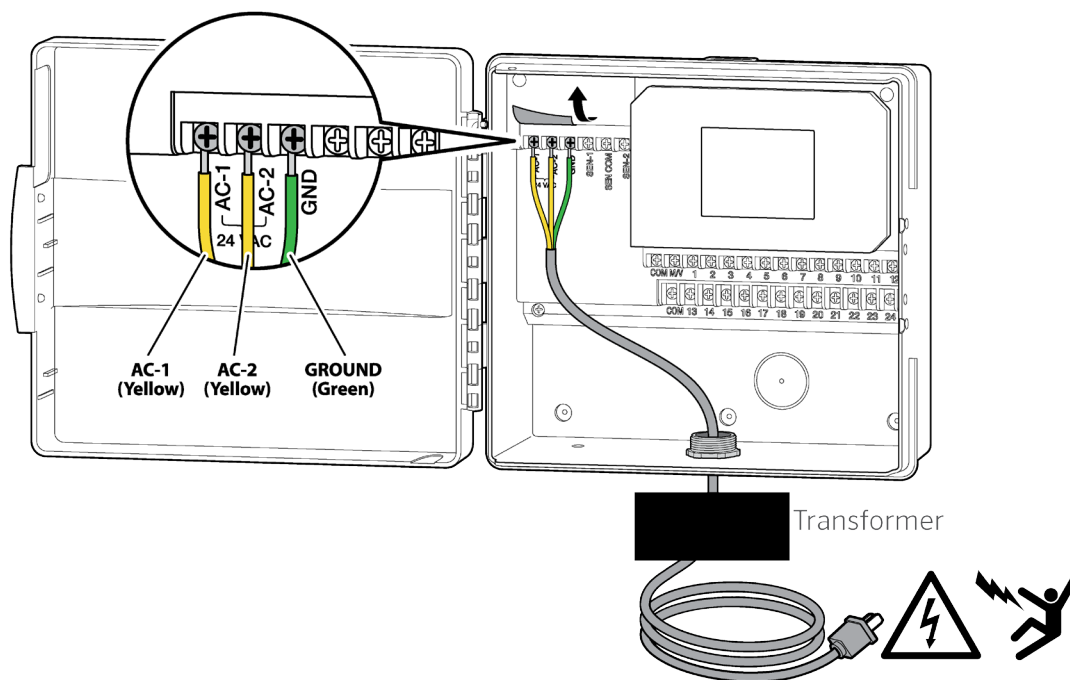

Note: The indoor Pro-HC is **not** water or weather resistant, and must be installed indoors or in a protected area. This device is not intended for use by young children. Never let children play with this device.


Hunter

Pro-HC Irrigation Controller

Outdoor cabinet

The outdoor model is water and weather resistant. Connecting the outdoor Pro-HC to the primary power should be done by a licensed electrician following all local codes.

1. Route AC power cable and conduit through the ½" (13 mm) conduit opening on the left side of the bottom of the cabinet.
2. Connect the wires to the transformer wires located inside the junction box. International units are supplied with a built-in terminal strip. Always use a UL listed conduit ½" (13 mm) male adapter when installing the AC wiring.
3. Insert the adapter into the ½" (13 mm) hole at the bottom of the controller. Attach a nut to the adapter inside the enclosure.
4. A battery is not required for this controller. Watering will not occur without AC power. Since this controller has non-volatile memory, the program, clock, and calendar will be retained during a power outage.

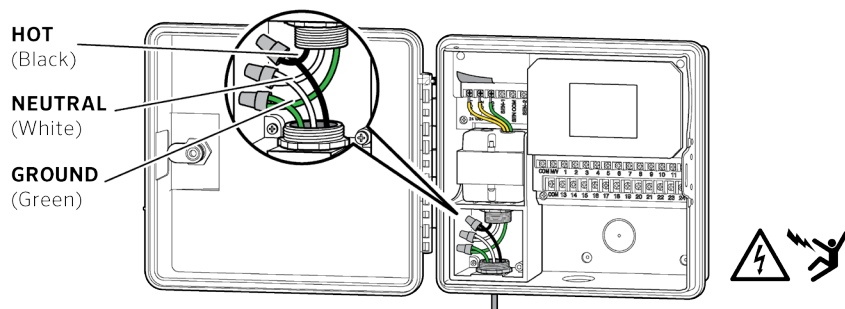


Note: To be performed by a licensed electrician only. Always use UL listed ½" (13 mm) conduit with male adapter when installing AC wiring. Pro-HC controllers are intended to be supplied AC power with an over-current protected device. Improper installation could result in shock or fire hazard. This device is not intended for use by young children. Never let children play with this device.

Hunter

Pro-HC Irrigation Controller

CONNECTING STATION WIRES

1. Route valve wires between control valve location and controller.
2. At valves, attach a common wire to either solenoid wire of all valves. This is most commonly a white-colored wire. Attach a separate control wire to the remaining wire of each valve. All wire splice connections should be done using waterproof connectors.
3. Route valve wires through the conduit and attach conduit to one of the openings on the bottom of the cabinet.
4. Strip $\frac{1}{2}$ " (13 mm) of insulation from ends of all wires. Secure the valve common wire to "COM" (Common) terminal. Attach all individual valve control wires to the appropriate station terminals.

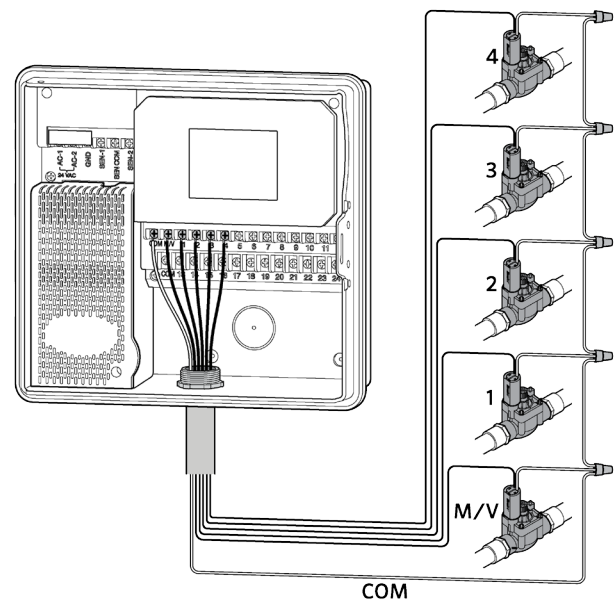

Note: All wire connections should be done using waterproof connectors. Connect each of the other individual wires to a different colored wire. Record zones against wire color for later reference. Connect the common wire from the multicore cable (usually white) to the terminals on the controller marked COM.

Hunter

Pro-HC Irrigation Controller

CONNECTING SENSORS OR FLOW METERS (OPTIONAL)

Pro-HC Controller supports most open/closed contact type of sensors, such as Hunter rain and soil moisture sensors.

1. Connect one sensor wire to COMMON on the controller.
2. Connect the Normally Closed or Normally Open wire from the sensor to SEN-1 or SEN-2 on the controller and configure in the Hydrowise app.

Wiring for standard Hydrowise 0.75" (20 mm) or 1" (25 mm) flow meters is as follows:

Flow Meter Wire	Label on Controller
Blue	SEN-1, SEN-2
White	SEN COM
Red	Not connected

For full details, refer to the instructions provided with your sensor, or flow meter.

Once you've wired your sensor, you must configure it in your Hydrowise account.

See Configuring Sensors at hydrowise.com/support for full instructions on setting up sensors.

Wiring for open/closed contact sensors is as follows:

Sensor Wire	Label on Controller
Normally Open / Normally Closed wire	SEN-1, SEN-2
Second (common) wire	SEN COM